



GETT.ASIA


GETT Asia Ltd.

KEYBOARDS

XTRA SERIES

KPL-G10120 (WHITE)

KPL-G20120 (BLACK)

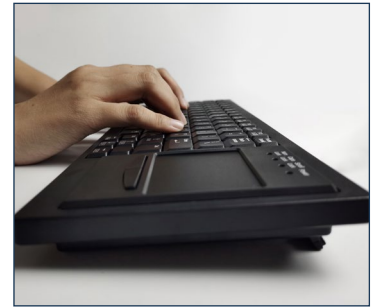

SPECIAL FEATURES

- Medical and industry keyboard
- Scissor-switch design
- Integrated Clean mode for cleaning
- Integrated Touchpad
- Flat key profile
- Excellent tactile feeling

SPECIFICATION

Number of keys:	83 (US/EU-Layout)	Operating temperature:	0°C ~ +40°C
Keyswitch technology:	Scissor mechanism	Storage temperature:	-40°C ~ +55°C
Switching cycles:	Approx. 5 mill. (per key)	Dimensions:	364.4 (L) x 133.4 (W) x 25 (T) mm
Housing material:	Plastic	Warranty:	2 years
Housing color:	White & black	Certification:	EN60601-1-2 Ed4, CE, FCC-ID EN301489-1-17+EN300328
Interfaces:	2.4Ghz wireless		
Mouse active size:	62 x 46 mm		
Weight:	580+/-10 g		

ORDER INFORMATION

Cat. No.	Touchpad	M3 Nut	2.4Ghz	Material	Color	Layout
KPL-G10120	✓	✓	✓	Plastic	White	US/DE/JP/KR/FR
KPL-G20120	✓	✓	✓	Plastic	Black	US/DE/JP/KR/FR

Other layouts, configurations and interfaces on request.

Version 03
2023

GETT Gerätetechnik GmbH

Mittlerer Ring 1
08233 Treuen
Germany

Tel: +49 37468 660 0
E-Mail: info@gett-group.com
Internet: www.gett-group.com

GETT Asia Ltd.

Room 806-7, Kowloon Plaza
No. 485 Castle Peak Road
Kowloon, Hong Kong, China

Tel: +852 3461 9789
E-Mail: info@gett-asia.com
Internet: www.gett-asia.com

GETT Assembly (Asia) Co., Ltd.


401 & 501, Building 1, No.97, Fuyong Area 107 Road
Baishixia Community, Fuyong Street
Baoan District, Shenzhen, China

Tel: +86 755 2323 6358
E-Mail: info@gett-asia.com
Internet: www.gett-asia.com

gett-asia.com
gett-group.com



TECHNICAL DRAWING (IN MM)

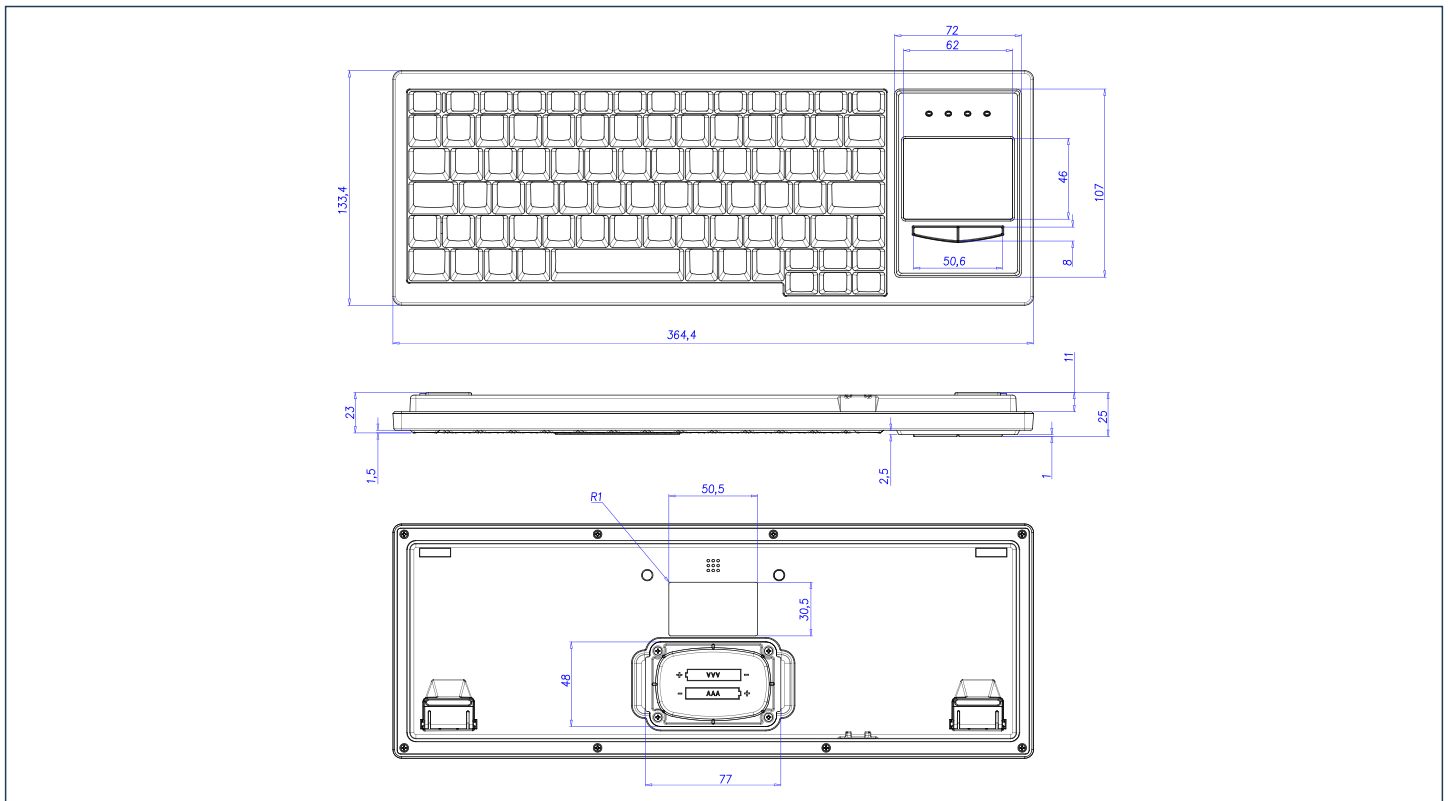

EN60601-1-2 Ed 4

EN60601-1-2 Ed 4 applies to the basic safety and essential performance of Medical Equipment (ME) equipment and ME systems in the presence of electromagnetic disturbances and to electromagnetic disturbances emitted by ME equipment and Me systems.

SHORT OPERATING INSTRUCTIONS

CLEAN MODE

Press Fn and F5 to enable clean mode. Clean mode is indicated by the three Lock-LEDs flashing.

WIRELESS LEDS INDICATE

Press Fn, you can see the green Power-led on,

- 1) If the status Num lock on, it means, the led on
 - 2) If the status Caps lock on, it means, the led on
 - 3) If the status Scroll lock on, it means, the led on
- power saving mode design

CLEANING INSTRUCTION

For further details please refer to below link:

<https://gett-group.com/en/gett-service/cleaning-and-material-resistances>